

## Features and Applications:

- Manual type transfer stretcher.
- Single crank is used for height adjustment, stretcher can be positioned up and down by turning the crank clockwise and anti-clockwise respectively.
- Bright arrow symbols direct the user how to operate clearly.
- Central locking castors are matched with direction castor under the chassis, which helps the user for easy control of stretcher direction.
- Concave chassis cover is used for storage
- Rotary rollover protective railing, PP bed board produced by blowing molding



## Technical Specifications:

<b>Overall dimensions (LxW)</b>	1960x665mm (77.1x26.2 in)
<b>Height adjustment (Bed board to ground)</b>	750-500mm (29.5-19.7 in)
<b>Diameter of Central-lock castor</b>	150mm (5.9 in)
<b>Back-rest lifting angle</b>	0-75°

